



# Installation Instructions

1 Clean surface

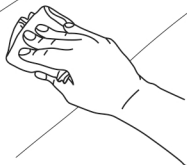


2

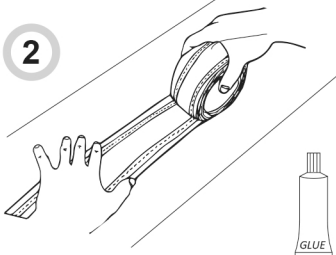


Glue Birdline strip to surface.  
Important: the conductors must be on the upper side.  
**WARNING** install out of reach of people passing by

3

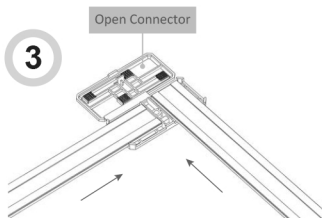


4

3 optional stripe connecting modes

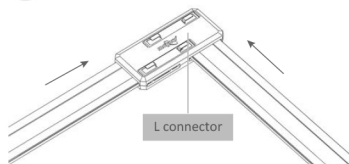

5

Insert Birdline strip into both sides of straight connector

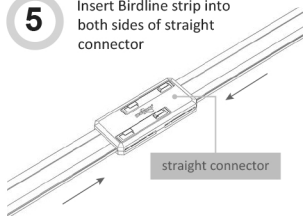

6

Use corner connectors if necessary

